

User's manual

Quick guide


Declaration

Thank you for purchasing our **MP3 GO** MP3 player. This user Manual is provided to help you to get the most of the MP3 player. Please read this manual carefully before using your new player. The information contained in this User Manual is subject to change without prior notice!

Notice

This MP3 player uses 1 x AAA battery. If this player is not to be used for a long time, please remove the battery from the player. This player can not charge batteries.

Keys Functions Definition

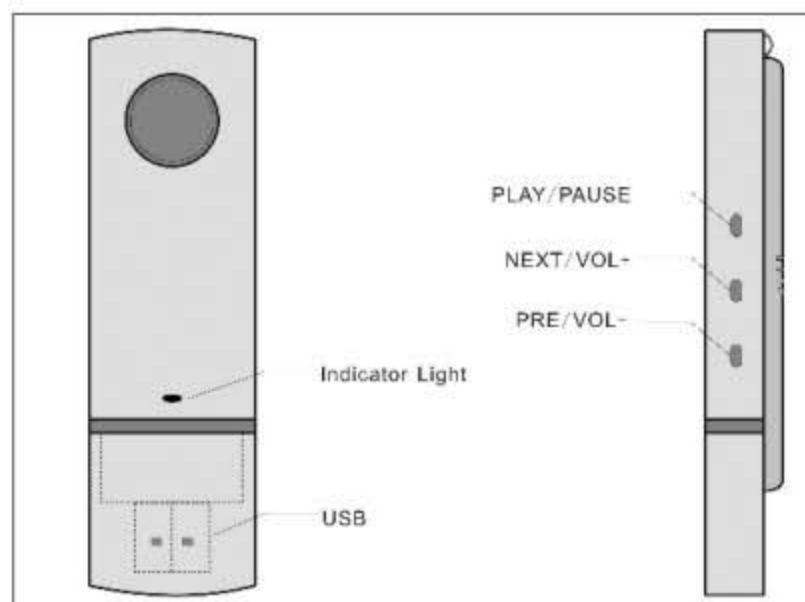

▲ **Power ON/OFF:** Press and hold "▶||/■" to power on. Press and hold "▶||/■" to power off.

▲ **Play music:** Press and hold "▶||/■" to power on and then press "▶||/■" to play music, then press "▶||/■" to pause music.

▲ **Previous/Next song:** Press " | ◀◀/V-" , the previous song will be played. Press " ▶▶ | /V+" , the next song will be played.

▲ **Adjust volume:** Press and hold " | ◀◀/V-" to reduce the volume, Press and hold "▶▶ | /V+" to increase the volume.

Transferring music to the player.

Plug the player into a spare USB port on the computer. When connected the drivers should load and the player will be displayed as a "Removable Disk" in the "My Computer" window and be assigned the next available drive letter. MP3 or WMA files can be copied to the player the same as you would copy files to other locations on your computer. Music files cannot contain any form of copy protection.

Trouble shooting

Cannot power on	Check if the battery has power.
No Sound	Make sure volume is not on 0 position and the connection to earphone is valid. Please make sure the earphone is clean. Ensure that the music file is free of copy protection. All files are to be in the MP3 or WMA format only. Other formats will not play.
Cannot Download Music	Check USB cable, and make sure the player is properly connected to the PC. Check if the driver is well installed